



INSTALLATION INSTRUCTIONS

**PART NUMBER: FEX18-100 GRILLE GUARD
FEX18-PB PUSH BAR
APPLICATION: 2018+ FORD EXPEDITION**

QTY	PARTS LIST
1	FEX18-100/PB
6	½" x 1 ½" HEX HEAD BOLTS
6	½" HEX NUTS
6	½" LOCK WASHERS
12	½" FLAT WASHERS
1	FLD21-100 LEFT FRAME BRACKET
1	FLD21-100 RIGHT FRAME BRACKET


**Inspect bumper and all parts prior to installation.

-WARNING-


Special care should be exercised in the handling and installation of our products.

- Always wear safety glasses during installation process to avoid personal injury.
- Use extreme caution when lifting and securing product into place.
- Never position yourself directly under product during installation.
- Insulate all exposed wiring and electrical connectors.
- Always securely mount wiring harness to bumper and vehicle.
- Products may require minor trimming for proper fit.
- Periodically check nuts and bolts to make sure they remain tight


INSTALLATION INSTRUCTIONS

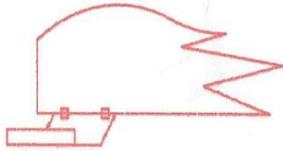

**REMOVE FACTORY
TOW HOOKS**

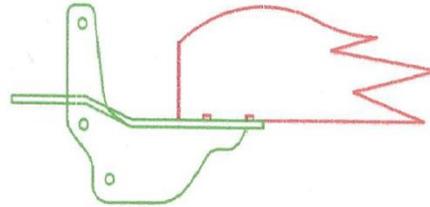

**INSTALL GRILLE GUARD
MOUNT WITH TOW POINT
TOWARDS THE CENTERLINE
OF THE VEHICLE. RE-USE
FACTORY BOLTS.**

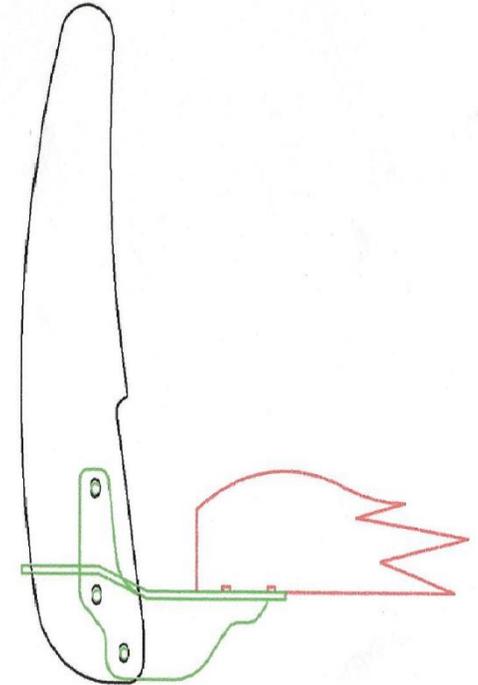

**INSTALL GRILLE GUARD
WITH MOUNTS TO THE
INSIDE OF THE GUARD
UPRIGHTS.**

NOTE: LEAVE ALL BOLTS FINGER TIGHT UNTIL FINAL ALIGNMENT OF THE GUARD